



1. Insert the Wing

2. Tighten the Pressure Bolt

Insert the supplied Torx key and turn the pressure-bolt clockwise. This expands the fuselage and locks the wing in place.



DO NOT TURN THE PRESSURE BOLT ANTI-CLOCKWISE TO LOCK THE WING. THIS MAY DAMAGE THE WING.

3. Repeat for the Tail Wing

These bolts are used to adjust tail wing angle. They don't need to be undone when packing away your foil.

This part of the fuselage stays bolted to the mast when packing away. These bolts don't need to be undone.

Optional: insert and tighten the additional security bolt.

ASSEMBLY GUIDE

4. Disassembly

Release the pressure bolts with half a turn anti-clockwise and slide the front and tail wings off.



DO NOT OVER-TURN THE PRESSURE BOLTS ANTI-CLOCKWISE. THIS MAY DAMAGE THE WING.